
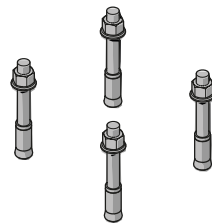
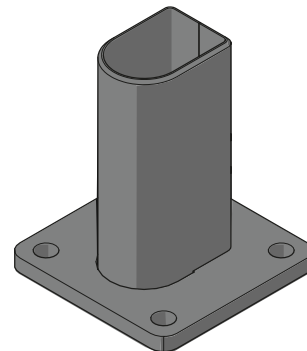
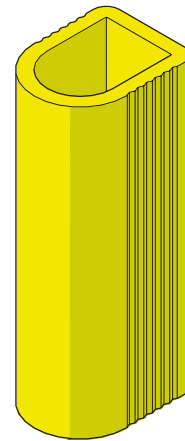
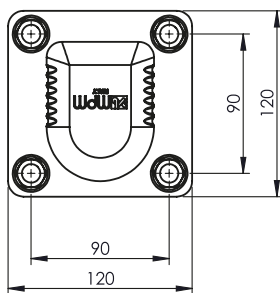
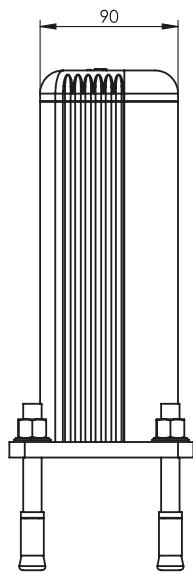








GRD 90

BOLLARD

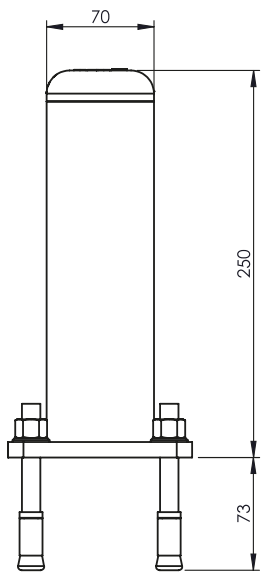

GRD 90/150

ASSEMBLY INSTRUCTIONS

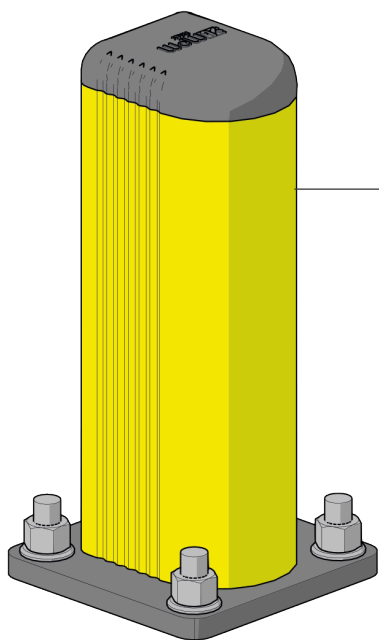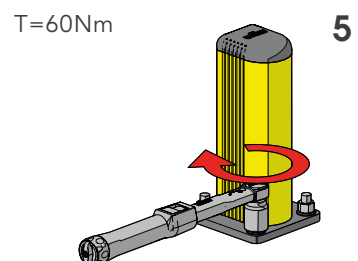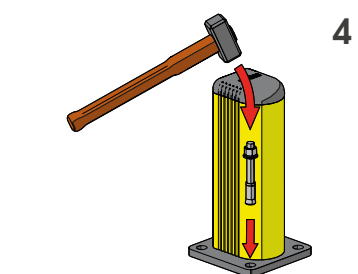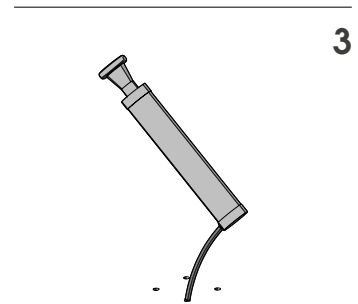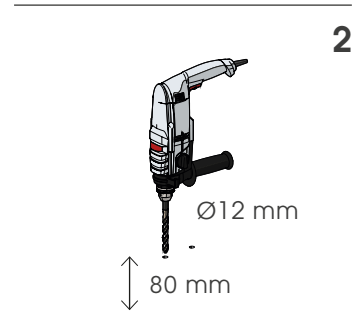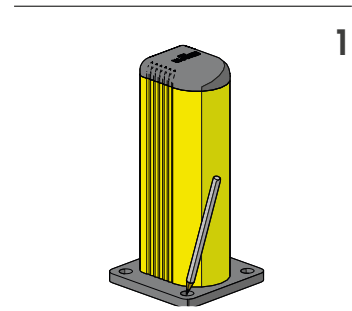

WARNING

The distance of installation depends on speed and weight of vehicle

