
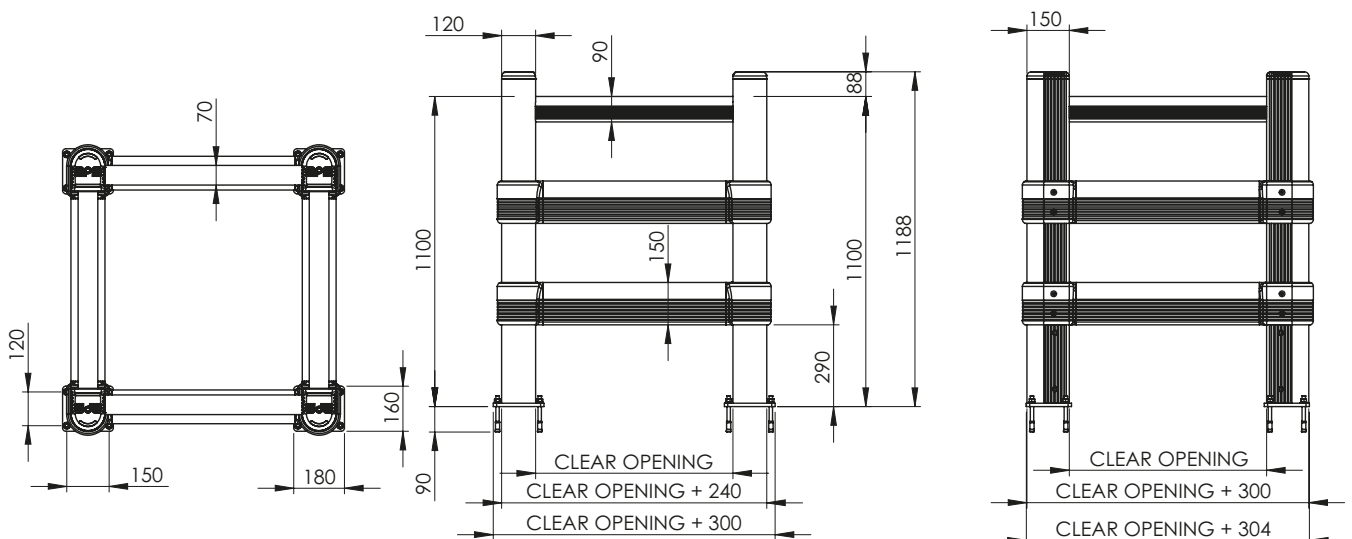


TOWER LINK

COLUMN PROTECTION

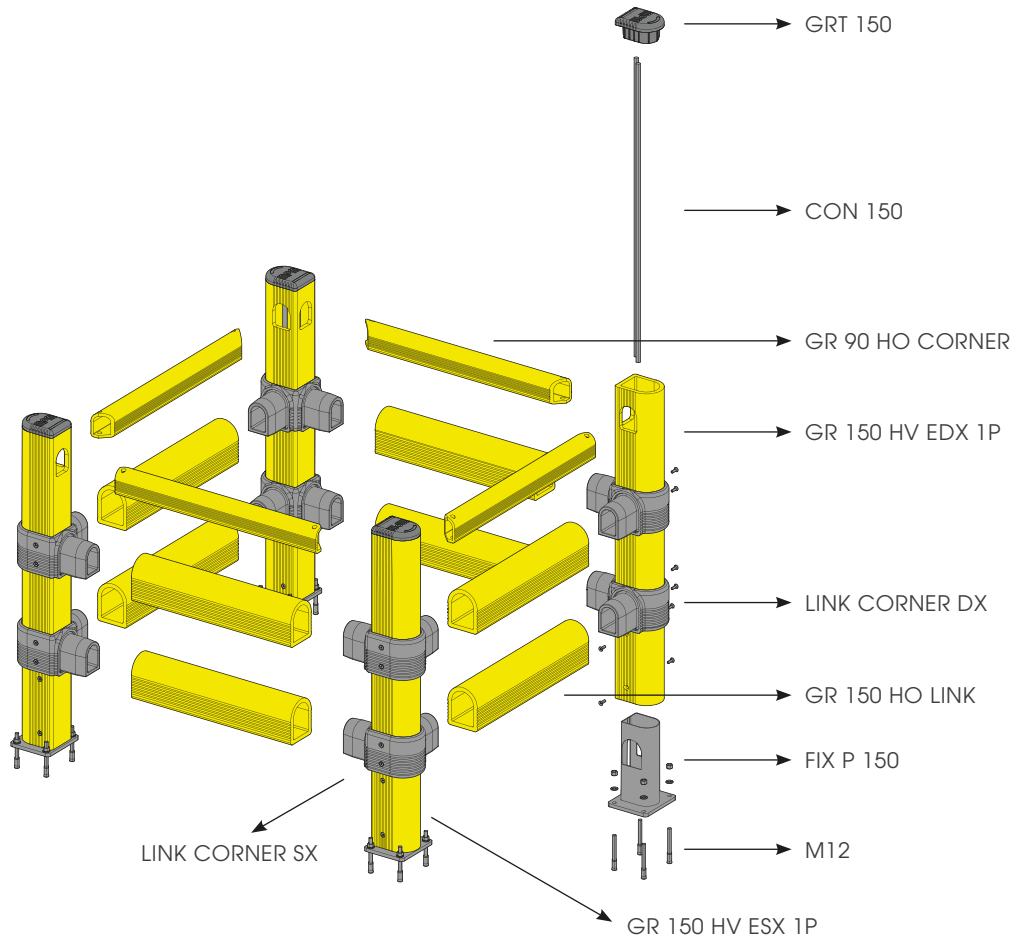


TOWER LINK




ASSEMBLY INSTRUCTIONS

SOLUTION DISPLAYED: **TOWER LINK/2**

Ø12 mm

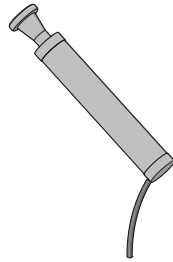

19

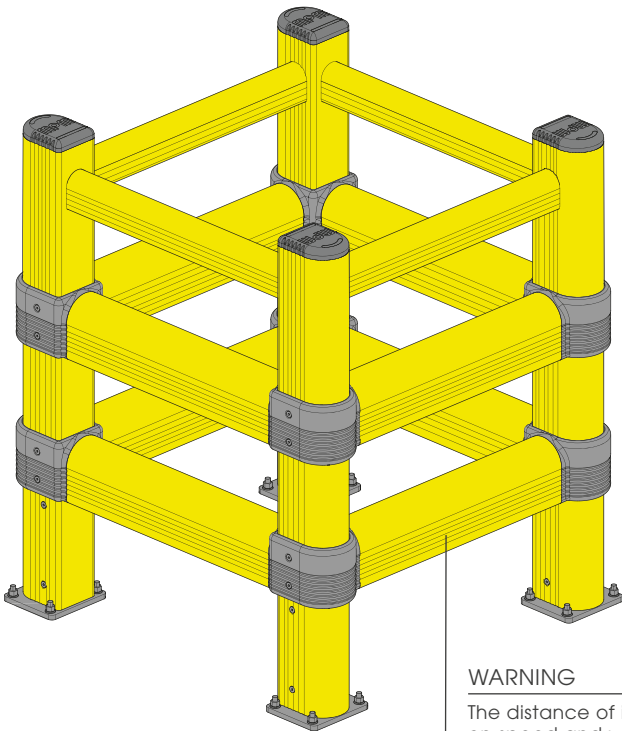




WARNING


The distance of installation depends on speed and weight of vehicle

COLUMN

MIN 100mm*




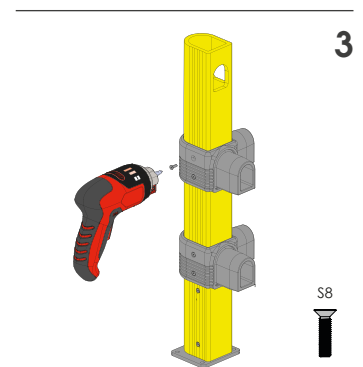
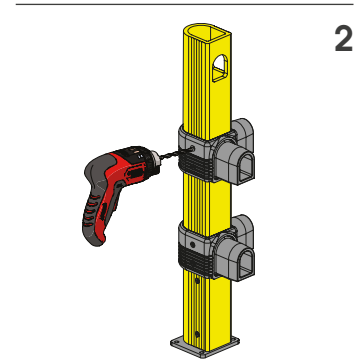
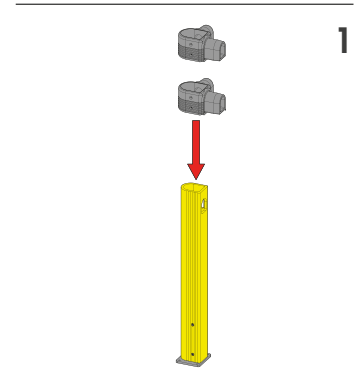


S8


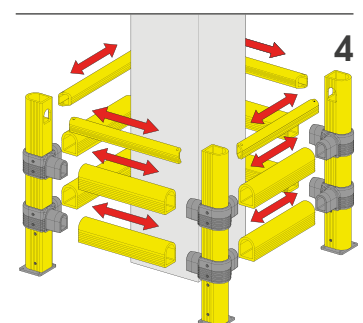


TOWER LINK


ASSEMBLY INSTRUCTIONS

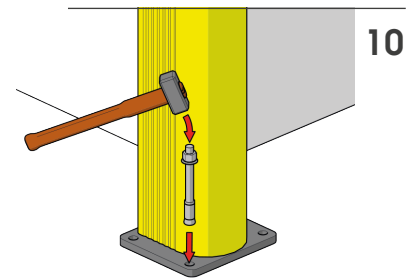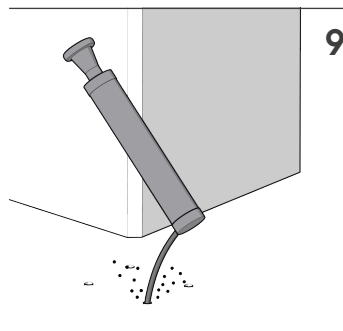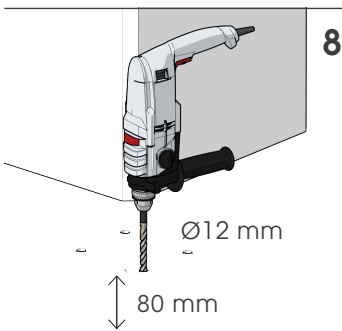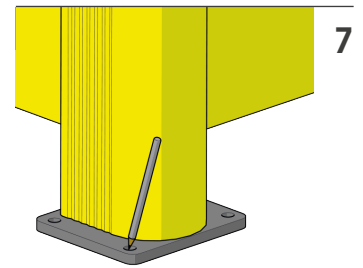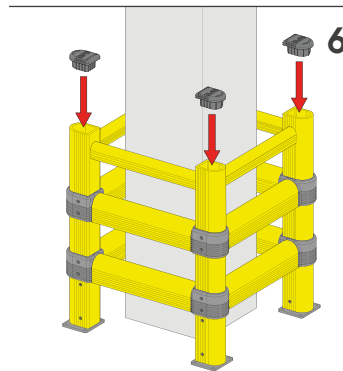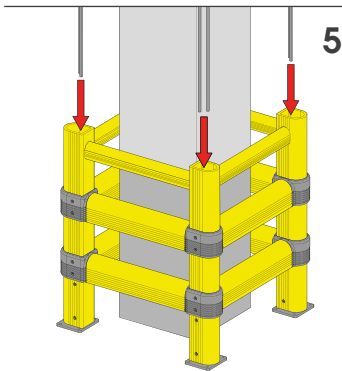


INSTALLATION TIP

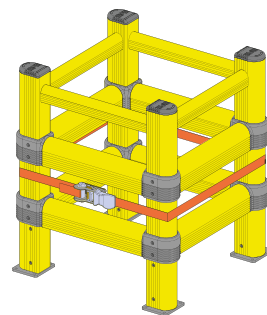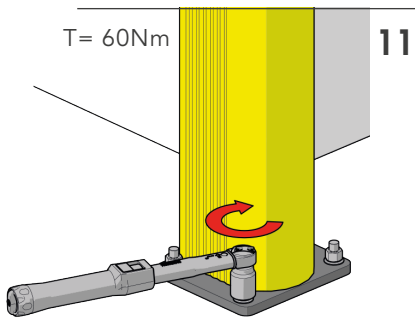

TOWER LINK/1

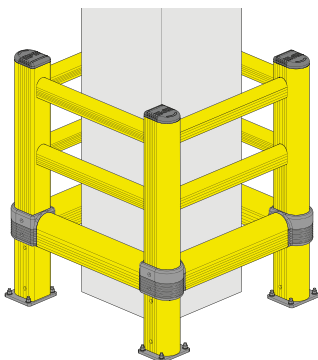

TOWER LINK/2

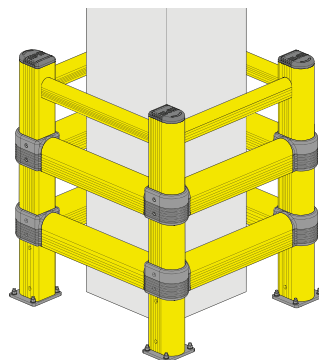

TOWER LINK/3

