
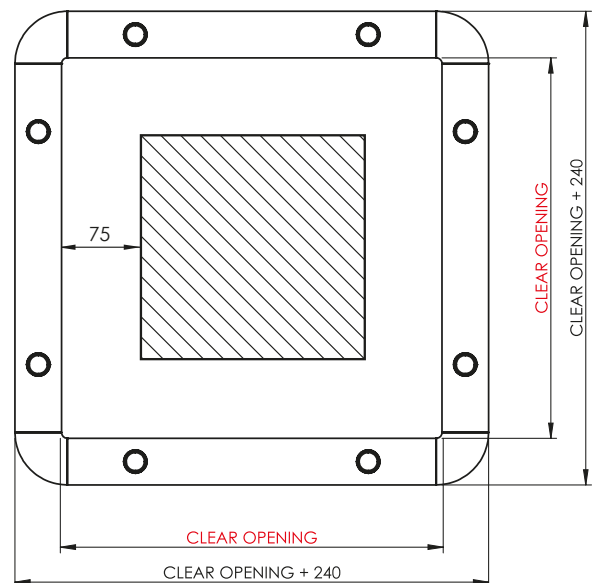
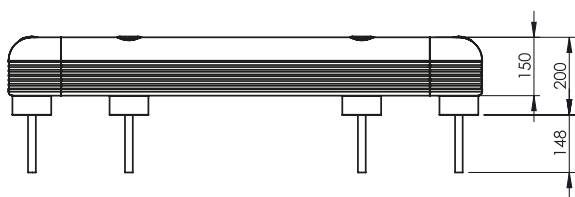


COPRO 150

COLUMN PROTECTION



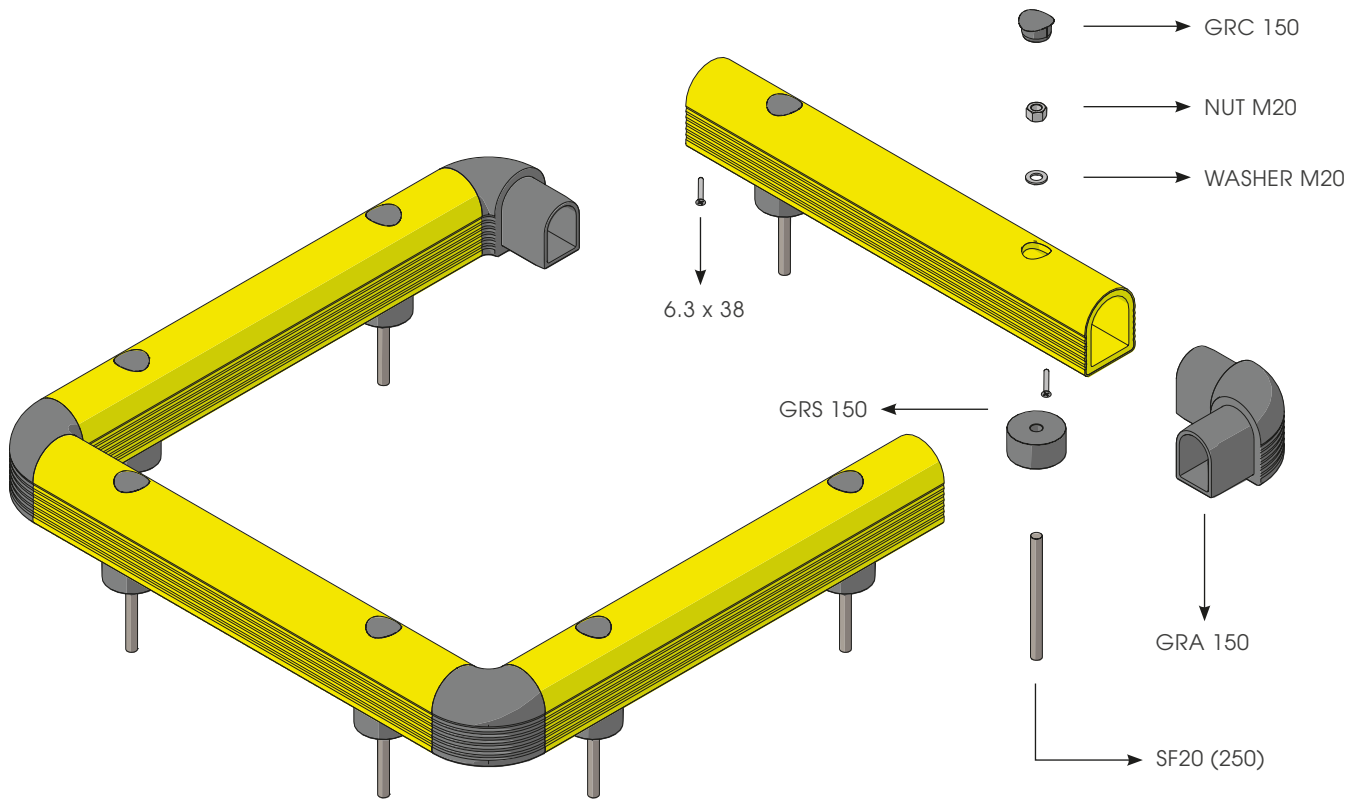


COPRO 150


ASSEMBLY INSTRUCTIONS

CHEMICAL ANCHOR


Ø24 mm

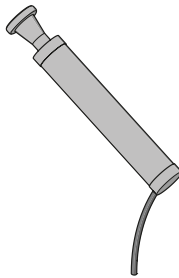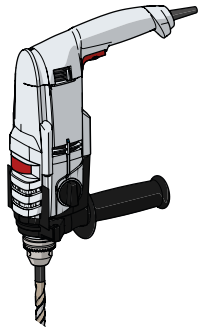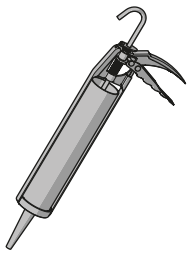


30

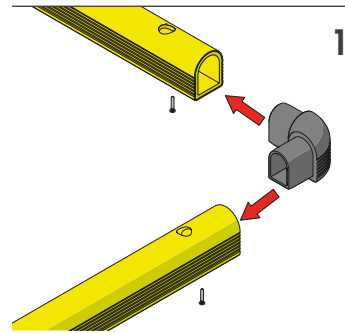


1

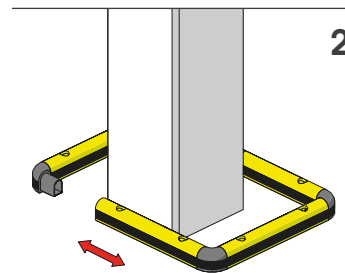


2

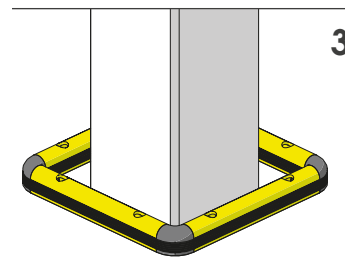

3

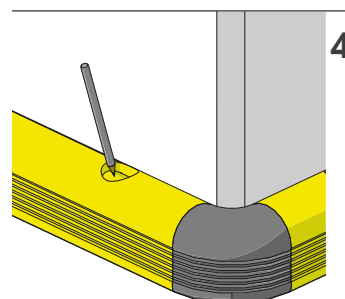

4

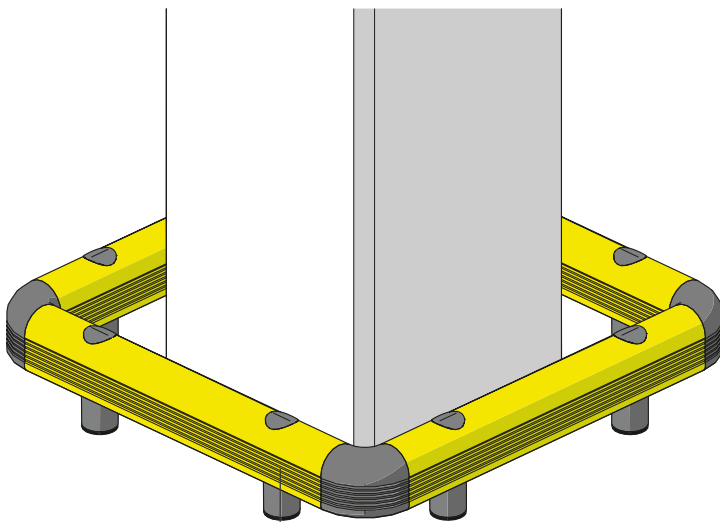

WARNING*

The distance of installation depends on speed and weight of vehicle

COLUMN

MIN 75mm*



COPRO 150

ASSEMBLY INSTRUCTIONS

